🕅 Industrial Shields M-Duino DALI Family Datasheet

Technical Features CONECTABLE PLC ARDUINO 24Vcc M-DUINO

MODEL TYPE	M-Duino DALI	
Input Voltage	12 to 24Vdc (Fuse protection (2.5A) Polarity protection)	
Input rated voltage	24Vdc	
Rated Power	30 W	
I max.	5A	
Clock Speed	16MHz	
Flash Memory	256KB of which 8KB used by bootloader	
SRAM	8KB	
EEPROM	4KB	
Communications	12C, Ethernet, USB, RS485, RS232, SPI , Max232-Max485-W5500, DALI	
USB consideration!	Only for uploading or debugging, NOT connected as a serial Cannot be working in a final application	

General Features

Power supply voltage	DC power supply	12 to 24Vdc
Operating voltage range	DC power supply	11.4 to 25.4Vdc
Power consumption	DC power supply	30 W MAX.
External power supply	Power supply voltage	24Vdc
	Power supply capacity	700mA
Insulation resistance	20MΩ min.at 500Vdc between the AC terminals and the protective earth terminal.	
Dielectric strength	2.300 VAC at 50/60 Hz for one minute with a leakage current of 10mA max. Between all the external AC terminals and the protective ground terminal.	
Shock resistance	80m/s2 in the X, Y and Z direction 2 times each.	
Ambient temperature (operating)	0° to 60°C	
Ambient humidity (operating)	10% to 90% (no condensation)	
Ambient environment (operating)	With no corrosive gas	
Ambient temperature (storage)	-20° to 60°C	
Power supply holding time	2ms min.	





Performance Specifications


Arduino Board	Arduino Mega 2560	
Control method	Stored program method	
I/O control method	Combination of the cyclic scan and immediate refresh processing methods.	
Programming language	Arduino IDE. Based on wiring (Wiring is an Open Source electronics platform composed of a programming language. "similar to the C")	
Microcontroller	ATmega2560	
	http://arduino.cc/en/Tutorial/HomePage	

1 INPUTS


An/Dig Input 10bit (0-10Vcc)	0 to 10Vdc Input Impedance: 39K Separated PCB ground Rated Voltage: 10Vdc 5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
Digital Isolated Input (24Vcc)	5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
Interrupt isolated Input HS (24Vcc) * • The Interrupt isolated Inputs can also work as Digital isolated Inputs	5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc
Expandability	
I2C - 127 elements - Serial Po	ort RS232/RS485

OUTPUTS

•	
Analog Output 8bit (0-10Vcc) • The Analog outputs can also work as Digital outputs	0 to 10Vdc I max: 20 mA Separated PCB ground Rated Voltage: 10Vdc
Digital Isolated Output (24Vcc)	5 to 24Vdc I max: 70 mA Galvanic Isolation Diode Protected for Relay Rated Voltage: 24Vdc
Digital Isolated Output Relay	250Vac I max: 5A Galvanic Isolation Diode protected for Relay
	Imax 30Vdc: 3A
PWM Isolated Output Bbit (24Vcc) • The PWM outputs can also work as Digital outputs	5 to 24Vdc I max: 70 mA Galvanic Isolation Diode Protected for Relay Rated Voltage: 24Vdc

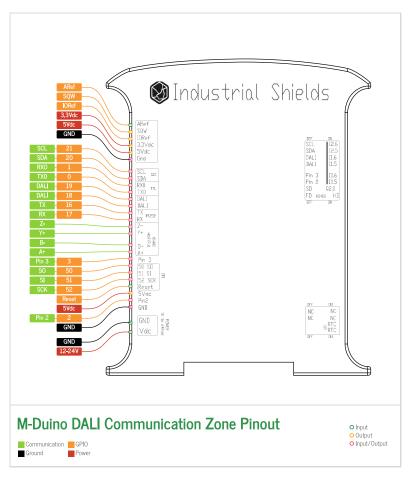

😡 Industrial Shields

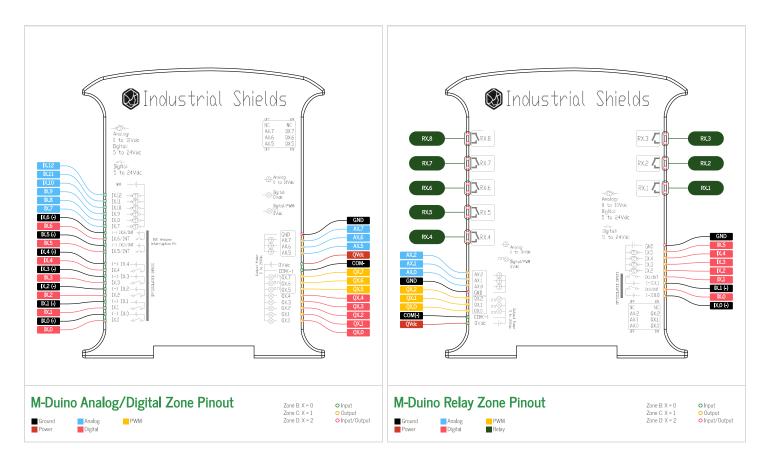

Mechanical dimensions and weights

		Measu	rements	
MODEL	Height (mm)	Width (mm)	Depth (mm)	Max Weight (g)
19R+	119.5	70.1	101	394
21+	119.5	70.1	101	394
38AR+	119.5	94.7	101	504
38R+	119.5	94.7	101	504
42+	119.5	94.7	101	504
50RRA+	119.5	119.3	101	614
53ARR+	119.5	119.3	101	614
54ARA+	119.5	119.3	101	614
57AAR+	119.5	119.3	101	614
57R+	119.5	119.3	101	614
58+	119.5	119.3	101	614

M-Duino I/Os Table

Model	Reference	Analog Input	Digital Isolated Input	Digital Isolated Output	Analog Output	Relay output	PWM Isolated Output
19R+	IS.MDUIN019R+	4	2	0	3	8	3
21+	IS.MDUINO.21+	6	7	5	3	0	3
38AR+	IS.MDUINO.38AR+	10	7	5	6	8	6
38R+	IS.MDUINO.38R+	8	2	0	6	16	6
42+	IS.MDUINO.42+	12	12	10	6	0	6
50RRA+	IS.MDUINO.50RRA+	12	8	4	8	16	8
53ARR+	IS.MDUINO.53ARR+	14	9	5	8	15	8
54ARA+	IS.MDUINO.54ARA+	14	13	9	8	8	8
57AAR+	IS.MDUINO.57AAR+	16	14	10	8	7	8
57R+	IS.MDUINO.57R+	12	4	0	8	23	8
58+	IS.MDUINO.58+	16	18	14	8	0	8

Zones table

		Zone	s Table	
MODEL	Zone A	Zone B	Zone C	Zone D
19R+	\checkmark	Relay	-	-
21+	\checkmark	Analog/Digital	-	-
38AR+	\checkmark	Analog/Digital	Relay	-
38R+	\checkmark	Relay	Relay	-
42+	\checkmark	Analog/Digital	Analog/Digital	-
50RRA+	\checkmark	Relay	Relay	Analog/Digital
53ARR+	\checkmark	Analog/Digital	Relay	Relay
54ARA+	\checkmark	Analog/Digital	Relay	Analog/Digital
57AAR+	\checkmark	Analog/Digital	Analog/Digital	Relay
57R+	\checkmark	Relay	Relay	Relay
58+	\checkmark	Analog/Digital	Analog/Digital	Analog/Digital

Notes

The following pins are not connected: - Analog/Digital: I2.11, I2.12, I2.4, I1.5, I1.6, A2.7, Q2.7, Q2.4 - Relay: R2.5, A2.2, Q2.2, I1.1 I1.0	.,
∗The analog inputs can also be used as digital isolated inputs.	
*The PWM outputs can also be used as digital isolated outputs.	
The associated PWM and analog outputs cannot be used at the same time (check switch configuration).	

Industrial Shields

		A	
Install Arduino IDE	and the Industrial Shields boards	Warnings	
The steps to fo are:	Illow to install our equipment's to Arduino IDE	Unused pins should not be connected. Ignoring the directive may damage the controller.	
• Open the Arduin yet , you can dowr	o IDE, versión 1.8.19 or superior. If you don't have it nload here	Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.	
	ino.cc/en/Main/Software .	Industrial Shields PLCs must be powered between 12Vdc and 24Vdc. If a higher voltage is supplied to the equipment can suffer irreversible damage.	
Press the "Pr preferences windo	references"option to "File" menu and open the ww.	Maintenance must be performed by qualified personnel familiarized with the construction, operation, and hazards involved with the control.	
	Additional boards manager URLs", add the direction: trialshields.com/main/arduino/boards/package_ind	Maintenance should be performed with the control out of operation and disconnected from all sources of power.	
• Close the prefere	ex.json ences window with the "OK" button.	The Industrial Shields Family PLCs are Open Type Controllers. It is required that you install the M-Duino PLC in a housing, cabinet, or electric control room. Entry to the housing, cabinet, or electric control room should be limited to authorized personnel.	
	menu, and open the "Boards" submenu, and click the option, to open the Boards Manager window.	Inside the housting, cabinet or electric control room, the Industrial Shields PLC must be at a minimum distance from the rest of the components of a minimum of 25 cm, it can be severely damaged.	
• Search "industria click "Install"	Ishields" to the search filter and select to the list and	Failure to follow these installation requirements could result in severe personal injury and/or property damage. Always follow these requirements when installing M-Duino family PLCs.	
	s Manager". Once it is performed that steps, you are at each PLC that you wish to work on "Tools" -> 0	In case of installation or maintenance of the M-Duino please follow the instructions marked in the Installation and Maintenance section on the User Guide.	
	nation: strialshields.com/first-steps-with-the-industrial- -s-and-the-panel-pc-s-raspberry-pi-based#boards	Do not disconnect equipment when a flammable or combustible atmosphere is present. Disconnection of equipment when a flammable or combustible atmosphere is present may cause a fire or explosion which could result in death, serious injury and/or property damage.	
		 This equipment does not include galvanic isolation between the grounds of the different systems. This means that if an external device or sensor that shares the same ground reference (GND) with the system is connected, any potential difference between these grounds could damage the connected components. To avoid issues with interference, ground loops, or damage to external equipment, ensure that all connected devices share the same ground reference or use systems with appropriate isolation. The recommendations in this case are: Connection Review: Verify that all ground connections are properly made and that there are no significant potential differences between them. Use of Isolation: Consider using galvanic isolators or isolation transformers if it is necessary to connect equipment with different ground references. 	
Symbology		Technical Support	
	es that the equipment is suitable for direct current only; to relevant terminals	You can contact with us using the best channel for you:	
Indicate	is that the equipment is suitable for alternating current identify relevant terminals	support@industrialshields.com	
	tify the control by which a pulse is started.	www.industrialshields.com	

7

E

	Indicates that the equipment is suitable for direct current only; to identify relevant terminals
\sim	Indicates that the equipment is suitable for alternating current only, to identify relevant terminals
Л	To identify the control by which a pulse is started.
Ţ	To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicily required.
\otimes	To identify the switch by means of which the signal lamp(s) is (are) switched on or off.
CE	CE marking indicates that a product complies with applicable European Union regulations
Â	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
4	To indicate hazards arising from dangerous voltages

Visit our Blog, Forum or Ticketing system

Check the user guides

Visit our Channel