Industrial Shields M-Duino Family Datasheet

Technical Features CONECTABLE PLC ARDUINO 24Vcc M-DUINO

MODEL TYPE	M-Duino
Input Voltage	12 to 24Vdc (Fuse protection (2.5A) Polarity protection)
Input rated voltage	24Vdc
Rated Power	30 W
l max.	1.5A
Clock Speed	16MHz
Flash Memory	256KB of which 8KB used by bootloader
SRAM	8KB
EEPROM	4КВ
Communications	12C, Ethernet, USB, RS485, RS232, SPI (2x) Rx, Tx (Arduino pins) Max232-Max485-W5500
USB consideration!	Only for uploading or debugging, NOT connected as a serial Cannot be working in a final application

General Features

Deven even a house the sec	D0	101 04/1	
Power supply voltage	DC power supply	12 to 24Vdc	
Operating voltage range	DC power supply	11.4 to 25.4Vdc	
Power consumption	DC power supply	30 W MAX.	
External power supply	Power supply voltage	24Vdc	
	Power supply capacity	700mA	
Insulation resistance	20MΩ min.at 500Vdc between the AC terminals and the protective earth terminal.		
Dielectric strength	2.300 VAC at 50/60 Hz for one minute with a leakage current of 10mA max. Between all the external AC terminals and the protective ground terminal.		
Shock resistance	80m/s2 in the X, Y and Z direction 2 times each.		
Ambient temperature (operating)	0° to 60°C		
Ambient humidity (operating)	10% to 90% (no condensation)		
Ambient environment (operating)	With no corrosive gas		
Ambient temperature (storage)	-20° to 60°C		
Power supply holding time	2ms min.		





Datasheet IS.MDuino Family

ARDUINO Original Arduino Mega included

Performance Specifications

Arduino Board	Arduino Mega 2560				
Control method	Stored program method				
I/O control method	Combination of the cyclic scan and immediate refresh processing methods.				
Programming language	Arduino IDE. Based on wiring (Wiring is an Open Source electronics platform composed of a programming language. "similar to the C")				
Microcontroller	ATmega2560				
	http://arduino.cc/en/Tutorial/HomePage				

1 INPUTS


An/Dig Input 10bit (0-10Vcc)	0 to 10Vdc Input Impedance: 39K Separated PCB ground Rated Voltage: 10Vdc 5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc	
Digital Isolated Input (24Vcc)	5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc	
Interrupt isolated Input HS (24Vcc) * * The Interrupt isolated Inputs can also work as Digital isolated Inputs	5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc	

Expandability

I2C - 127 elements - Serial Port RS232/RS485


OUTPUTS

0 to 10Vdc I max: 20 mA Separated PCB ground Rated Voltage: 10Vdc
5 to 24Vdc I max: 70 mA Galvanic Isolation Diode Protected for Relay Rated Voltage: 24Vdc
250Vac I max: 5A Galvanic Isolation Diode protected for Relay
Imax 30Vdc: 3A
5 to 24Vdc I max: 70 mA Galvanic Isolation Diode Protected for Relay Rated Voltage: 24Vdc

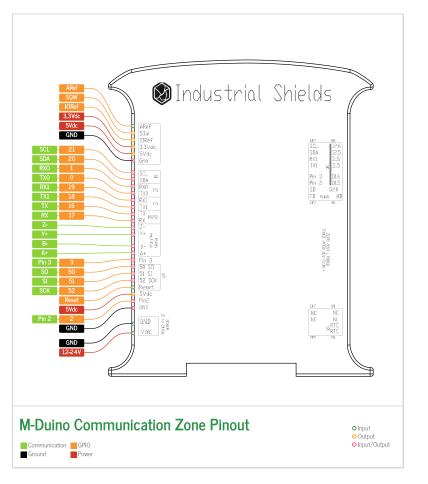

Datasheet IS.MDuino Family



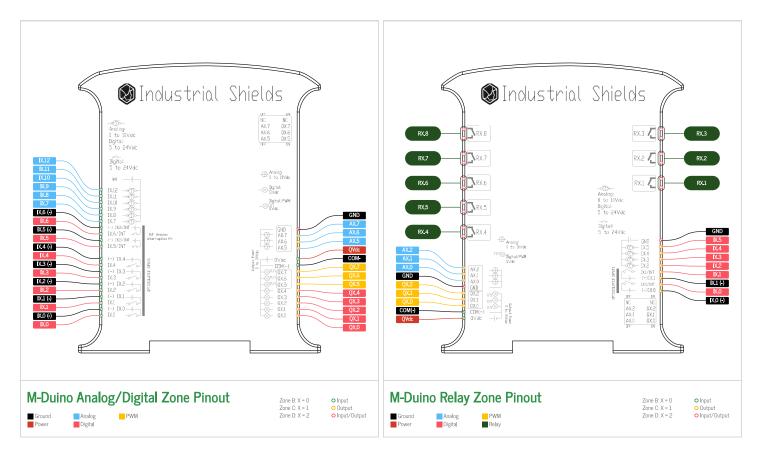

Mechanical dimensions and weights

	Measurements					
MODEL	Height (mm)	Width (mm)	Depth (mm)	Max Weight (g)		
19R+	119.5	70.1	101	378		
21+	119.5	70.1	101	378		
38AR+	119.5	94.7	101	488		
38R+	119.5	94.7	101	488		
42+	119.5	94.7	101	488		
50RRA+	119.5	119.3	101	598		
53ARR+	119.5	119.3	101	598		
54ARA+	119.5	119.3	101	598		
57AAR+	119.5	119.3	101	598		
57R+	119.5	119.3	101	598		
58+	119.5	119.3	101	598		

Zones table

	Zones Table					
MODEL	Zone A	Zone B	Zone C	Zone D		
19R+	\checkmark	Relay	-	-		
21+	\checkmark	Analog/Digital	-	-		
38AR+	\checkmark	Analog/Digital	Relay	-		
38R+	\checkmark	Relay	Relay	-		
42+	\checkmark	Analog/Digital	Analog/Digital	-		
50RRA+	\checkmark	Relay	Relay	Analog/Digital		
53ARR+	\checkmark	Analog/Digital	Relay	Relay		
54ARA+	\checkmark	Analog/Digital	Relay	Analog/Digital		
57AAR+	\checkmark	Analog/Digital	Analog/Digital	Relay		
57R+	\checkmark	Relay	Relay	Relay		
58+	1	Analog/Digital	Analog/Digital	Analog/Digital		

M-Duino I/Os Table

Model	Reference	Analog Input*	Digital Isolated Input	Digital Isolated Output	Analog Output	Relay output	PWM Isolated Output*
19R+	IS.MDUIN019R+	4	2	0	3	8	3
21+	IS.MDUINO.21+	6	7	5	3	0	3
38AR+	IS.MDUINO.38AR+	10	9	5	6	8	6
38R+	IS.MDUINO.38R+	8	4	0	6	16	6
42+	IS.MDUINO.42+	12	14	10	6	0	6
50RRA+	IS.MDUINO.50RRA+	12	10	4	8	16	8
53ARR+	IS.MDUINO.53ARR+	14	11	5	8	15	8
54ARA+	IS.MDUINO.54ARA+	14	15	9	8	8	8
57AAR+	IS.MDUINO.57AAR+	16	16	10	8	7	8
57R+	IS.MDUINO.57R+	12	6	0	8	23	8
58+	IS.MDUINO.58+	16	20	14	8	0	8

Notes

The following pins are not connected in Zone D: - Analog/Digital: I2.11, I2.12, I2.4, A2.7, Q2.7, Q2.4 - Relay: R2.5, A2.2, Q2.2

*The analog inputs can also be used as digital isolated inputs.

*The PWM outputs can also be used as digital isolated outputs.

The associated PWM and analog outputs cannot be used at the same time (check switch configuration).

💓 Industrial Shields

Install Arduino IDE and the Industrial Shields boards	Warnings
The steps to follow to install our equipment's to Arduino IDE are:	Unused pins should not be connected. Ignoring the directive may damage the controller.
• Open the Arduino IDE, versión 1.8.19 or superior. If you don't have it yet , you can download here	Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.
https://www.arduino.cc/en/Main/Software .	Industrial Shields PLCs must be powered between 12Vdc and 24Vdc. If a higher voltage is supplied to the equipment can suffer irreversible damage.
Press the "Preferences" option to "File" menu and open the preferences window.	Maintenance must be performed by qualified personnel familiarized with the construction, operation, and hazards involved with the control.
 In the text box "Additional boards manager URLs", add the direction: http://apps.industrialshields.com/main/arduino/boards/package_ind 	Maintenance should be performed with the control out of operation and disconnected from all sources of power.
 • Close the preferences window with the "OK" button. 	The Industrial Shields Family PLCs are Open Type Controllers. It is required that you install the M-Duino PLC in a housing, cabinet, or electric control room. Entry to the housing, cabinet, or electric control room should be limited to authorized personnel.
• Click on "Tools" menu, and open the "Boards" submenu, and click the "Boards Manager" option, to open the Boards Manager window.	Inside the housting, cabinet or electric control room, the Industrial Shields PLC must be at a minimum distance from the rest of the components of a minimum of 25 cm, it can be severely damaged.
\cdot Search "industrial shields" to the search filter and select to the list and click "Install"	Failure to follow these installation requirements could result in severe personal injury and/or property damage. Always follow these requirements when installing M-Duino family PLCs.
• Close the "Boards Manager". Once it is performed that steps, you are available to select each PLC that you wish to work on "Tools" -> "Boards" : M-Duino	In case of installation or maintenance of the M-Duino please follow the instructions marked in the Installation and Maintenance section on the User Guide.
To get more information: https://www.industrialshields.com/first-steps-with-the-industrial- arduino-based-plc-s-and-the-panel-pc-s-raspberry-pi-based#boards	Do not disconnect equipment when a flammable or combustible atmosphere is present. Disconnection of equipment when a flammable or combustible atmosphere is present may cause a fire or explosion which could result in death, serious injury and/or property damage.
	 This equipment does not include galvanic isolation between the grounds of the different systems. This means that if an external device or sensor that shares the same ground reference (GND) with the system is connected, any potential difference between these grounds could damage the connected components. To avoid issues with interference, ground loops, or damage to external equipment, ensure that all connected devices share the same ground reference or use systems with appropriate isolation. The recommendations in this case are: Connection Review: Verify that all ground connections are properly made and that there are no significant potential differences between them. Use of Isolation: Consider using galvanic isolators or isolation transformers if it is necessary to connect equipment with different ground references.
Symbology	Technical Support
Indicates that the equipment is suitable for direct current only; to	You can contact with us using the best channel for you:
 Indicates that the equipment is suitable for alternating current only, to identify relevant terminals 	support@industrialshields.com
To identify the control by which a pulse is started.	www.industrialshields.com
To identify an earth (ground) terminal in cases where neither the	Visit our Blog, Forum or Ticketing system

	Indicates that the equipment is suitable for direct current only; to identify relevant terminals	You can contact with us using the best channel for you
\sim	Indicates that the equipment is suitable for alternating current only; to identify relevant terminals	support@industrialshields.com
Ţ	To identify the control by which a pulse is started.	www.industrialshields.com
	To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicily required.	Visit our Blog, Forum or Ticketing sy
\otimes	To identify the switch by means of which the signal lamp(s) is (are) switched on or off.	Check the user guides
CE	CE marking indicates that a product complies with applicable European Union regulations	Visit our Channel
\triangle	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury	
4	To indicate hazards arising from dangerous voltages	