Datasheet Ardbox HF+ WiFi & BLE Family





Technical Features CONECTABLE PLC ARDUINO 24Vcc ARDBOX

MODEL TYPES Ardbox Analog HF+ WiFi & BLE / Ardbox Relay HF+ WiFi & BLE Input Voltage 12 to 24Vdc (Fuse protection (2.5A) Polarity protection) Input rated voltage 24Vdc Rated Power 30 W I max. 15A Size 100x45x115 Clock Speed 16MHz Flash Memory 32KB of which 4KB used by bootloader	
Input rated voltage	-
Rated Power 30 W I max. 1.5A	
I max. 1.5A Size 100x45x115 Clock Speed 16MHz	
Size 100x45x115 Clock Speed 16MHz	
Clock Speed 16MHz	
Olock Speed	
Flach Momeny 32KB of which 4KB used by hootloader	
Trasti Methory SEAS of Which the ascarsy booksader	
SRAM 2.5KB	
EEPROM 1KB	
Communications 12C, USB, RS485, RS232, SPI I (2x) Rx, Tx (Arduino pins), WiFi, E Max232-Max485-W5500	LE
USB consideration! Only for uploading or debugging. NOT connected as a serial Cannot be working in a final application	

General Features

Power supply voltage	DC power supply 12 to 24Vdc	
Operating voltage range	DC power supply	11.4 to 25.4Vdc
Power consumption	DC power supply	30 W MAX.
External power supply	Power supply voltage	24Vdc
	Power supply capacity	700mA
Insulation resistance	20MΩ min.at 500Vdc between the AC terminals and the protective earth terminal.	
Dielectric strength	2.300 VAC at 50/60 Hz for one minute with a leakage current of 10mA max. Between all the external AC terminals and the protective ground terminal.	
Shock resistance	80m/s2 in the X, Y and Z direction 2 times each.	
Ambient temperature (operating)	0° to 60°C	
Ambient humidity (operating)	10% to 90% (no condensation)	
Ambient environment (operating)	With no corrosive gas	
Ambient temperature (storage)	-20° to 60°C	
Power supply holding time	2ms min.	
Weight	350g max.	

RELAY I/O

An/Dig Input 10bit

(0-10Vcc) - (x6)

Digital Input

(24Vcc) - (x3)

Interrupt Input HS

· The Interrupt isolated Inputs can also work as Digital isolated Inputs

I2C - 127 elements - Serial Port RS232/RS485

① OUTPUTS (x10)

(24Vcc) * - (x1)

Expandability

Digital Isolated

Output Relay - (x8)

Analog Output 8bit

(0-10Vcc) - (x2)

The Analog outputs can also work as Digital outputs

INPUTS (x10)

0 to 10Vdc

0 to 10Vdc Input Impedance: 39K Separated PCB ground Rated Voltage: 10Vdc 5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc

5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation

5 to 24Vdc

250Vac

l max: 5A

0 to 10Vdc I max: 20 mA Separated PCB ground Rated Voltage: 10Vdc

Galvanic Isolation Diode protected for Relay Imax 30Vdc: 3A

I min: 2 to 12 mA Galvanic Isolation

Rated Voltage: 24 Vdc

Rated Voltage: 24 Vdc

ANALOG I/O

INPUTS (x10)

An/Dig Input 10bit (0-10Vcc) - (x6)	0 to 10Vdc Input Impedance: 39K Separated PCB ground Rated Voltage: 10Vdc 5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Pated Voltage: 24 Vdc

5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Digital Input (24Vcc) - (x3) Rated Voltage: 24 Vdc

5 to 24Vdc Interrupt Input HS (24Vcc) * - (x1) The Interrupt isolated Inputs can

I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc also work as Digital isolated Inputs

Expandability I2C - 127 elements - Serial Port RS232/RS485

① OUTPUTS (x10) 0 to 10Vdc Analog Output 8bit I max: 20 mA Separated PCB ground Rated Voltage: 10Vdc (0-10Vcc) - (x7)


Digital Isolated Output (24Vcc) - (x3)

5 to 24Vdc I max: 70 mA Galvanic Isolation Rated Voltage: 24Vdc

PWM Isolated Output 8bit (24Vcc)


5 to 24Vdc I max: 70 mA Galvanic Isolation Rated Voltage: 24Vdc The PWM outputs can also work as Digital outputs

Analog Version Pinout

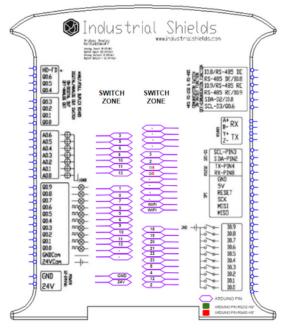

HS*: Hardware Serial SS*: Software Serial HD∗: Half Duplex FD*: Full Duplex

Relay Version Pinout

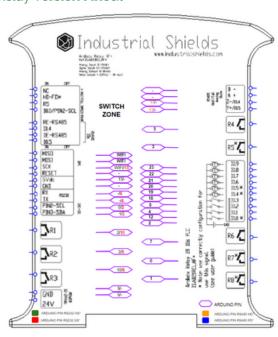

HS*: Hardware Serial SS*: Software Serial HD∗: Half Duplex FD*: Full Duplex





DataSheet Rev. 20230831



Performance Specifications

Arduino Board	Arduino Leonardo
Control method	Stored program method
I/O control method	Combination of the cyclic scan and immediate refresh processing methods.
Programming language	Arduino IDE. Based on wiring (Wiring is an Open Source electronics platform composed of a programming language. "similar to the C")
Microcontroller	ATmega32U4
	http://arduino.cc/en/Tutorial/HomePage

Install Arduino IDE and the Industrial Shields boards

The steps to follow to install our equipment's to Arduino IDE are:

• Open the Arduino IDE, versión 1.8.0 or superior. If you don't have it yet, you can download here

https://www.arduino.cc/en/Main/Software.

- Press the "Preferences" option to "File" menu and open the preferences window.
- In the text box "Additional boards manager URLs", add the direction: http://apps.industrialshields.com/main/arduino/boards/package_industrialshields_index.json
- · Close the preferences window with the "OK" button.
- Click on "Tools" menu, and open the "Boards" submenu, and click the "Boards Manager" option, to open the Boards Manager window.
- Search "industrialshields" to the search filter and select to the list and click "Install"
- Close the "Boards Manager". Once it is performed that steps, you are available to select each PLC that you wish to work on "Tools" -> "Boards": M-Duino...

To get more information:

https://www.industrialshields.com/first-steps-with-the-industrial-arduino-based-plc-s-and-the-panel-pc-s-raspberry-pi-based#boards

Warnings



Unused pins should not be connected. Ignoring the directive may damage the controller.

Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.

Industrial Shields PLCs must be powered between 12Vdc and 24Vdc. If a higher voltage is supplied to the equipment can suffer irreversible damage.

Maintenance must be performed by qualified personnel familiarized with the construction, operation, and hazards involved with the control.

Maintenance should be performed with the control out of operation and disconnected from all sources of power.

The Industrial Shields Family PLCs are Open Type Controllers. It is required that you install the M-Duino PLC in a housing, cabinet, or electric control room. Entry to the housing, cabinet, or electric control room should be limited to authorized personnel.

Inside the housting, cabinet or electric control room, the Industrial Shields PLC must be at a minimum distance from the rest of the components of a minimum of 25 cm, it can be severely damaged.

Failure to follow these installation requirements could result in severe personal injury and/or property damage. Always follow these requirements when installing M-Duino family PLCs.

In case of installation or maintenance of the M-Duino please follow the instructions marked in the Installation and Maintenance section on the User Guide

Do not disconnect equipment when a flammable or combustible atmosphere is present.

Disconnection of equipment when a flammable or combustible atmosphere is present may cause a fire or explosion which could result in death, serious injury and/or property damage.

Symbology

	Indicates that the equipment is suitable for direct current only; to identify relevant terminals
\sim	Indicates that the equipment is suitable for alternating current only, to identify relevant terminals
ĮД	To identify the control by which a pulse is started.
	To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicily required.
\otimes	To identify the switch by means of which the signal lamp(s) is (are) switched on or off.
C€	CE marking indicates that a product complies with applicable European Union regulations
\triangle	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
4	To indicate hazards arising from dangerous voltages

Technical Support

You can contact with us using the best channel for you:

support@industrialshields.com

www.industrialshields.com

Visit our Blog, Forum or Ticketing system



Use our chat service



Check the user guides



Visit our Channel

