



# Datasheet

# M-Duino DALI Family



Industrial Shields®



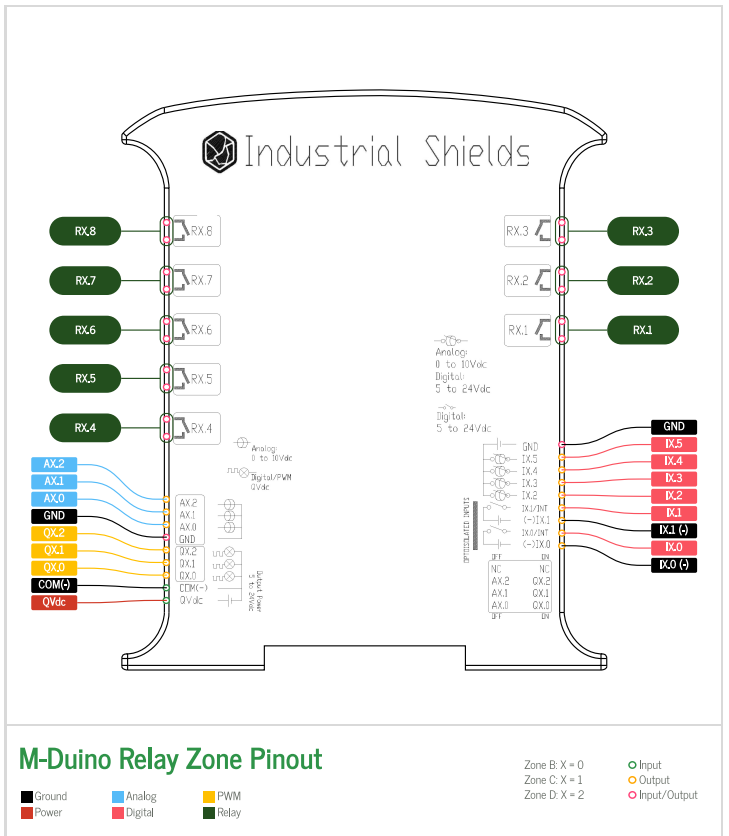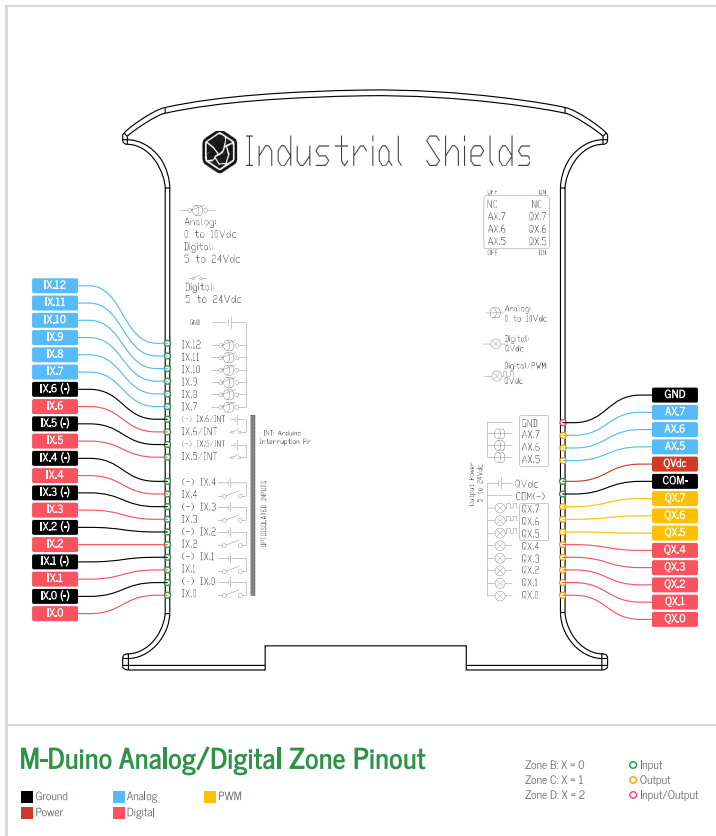

Mechanical dimensions and weights

MODEL	Measurements			
	Height (mm)	Width (mm)	Depth (mm)	Max Weight (g)
19R+	119.5	70.1	101	394
21+	119.5	70.1	101	394
38AR+	119.5	94.7	101	504
38R+	119.5	94.7	101	504
42+	119.5	94.7	101	504
50RRA+	119.5	119.3	101	614
53ARR+	119.5	119.3	101	614
54ARA+	119.5	119.3	101	614
57AAR+	119.5	119.3	101	614
57R+	119.5	119.3	101	614
58+	119.5	119.3	101	614

Zones table

MODEL	Zones Table			
	Zone A	Zone B	Zone C	Zone D
19R+	✓	Relay	-	-
21+	✓	Analog/Digital	-	-
38AR+	✓	Analog/Digital	Relay	-
38R+	✓	Relay	Relay	-
42+	✓	Analog/Digital	Analog/Digital	-
50RRA+	✓	Relay	Relay	Analog/Digital
53ARR+	✓	Analog/Digital	Relay	Relay
54ARA+	✓	Analog/Digital	Relay	Analog/Digital
57AAR+	✓	Analog/Digital	Analog/Digital	Relay
57R+	✓	Relay	Relay	Relay
58+	✓	Analog/Digital	Analog/Digital	Analog/Digital

M-Duino I/Os Table

Model	Reference	Analog Input	Digital Isolated Input	Digital Isolated Output	Analog Output	Relay output	PWM Isolated Output
19R+	IS.MDUINO.19R+	4	2	0	3	8	3
21+	IS.MDUINO.21+	6	7	5	3	0	3
38AR+	IS.MDUINO.38AR+	10	7	5	6	8	6
38R+	IS.MDUINO.38R+	8	2	0	6	16	6
42+	IS.MDUINO.42+	12	12	10	6	0	6
50RRA+	IS.MDUINO.50RRA+	12	8	4	8	16	8
53ARR+	IS.MDUINO.53ARR+	14	9	5	8	15	8
54ARA+	IS.MDUINO.54ARA+	14	13	9	8	8	8
57AAR+	IS.MDUINO.57AAR+	16	14	10	8	7	8
57R+	IS.MDUINO.57R+	12	4	0	8	23	8
58+	IS.MDUINO.58+	16	18	14	8	0	8

Notes

The following pins are not connected:

- Analog/Digital: I2.11, I2.12, I2.4, I1.5, I1.6, A2.7, Q2.7, Q2.4
- Relay: R2.5, A2.2, Q2.2, I1.1, I1.0

\*The analog inputs can also be used as digital isolated inputs.

\*The PWM outputs can also be used as digital isolated outputs.

The associated PWM and analog outputs cannot be used at the same time (check switch configuration).

## Performance Specifications

Arduino Board	Arduino Mega 2560
Control method	Stored program method
I/O control method	Combination of the cyclic scan and immediate refresh processing methods.
Programming language	Arduino IDE. Based on wiring (Wiring is an Open Source electronics platform composed of a programming language. "similar to the C")
Microcontroller	ATmega2560
	<a href="http://arduino.cc/en/Tutorial/HomePage">http://arduino.cc/en/Tutorial/HomePage</a>

### Install Arduino IDE and the Industrial Shields boards

The steps to follow to install our equipment's to Arduino IDE are:

- Open the Arduino IDE, versión 1.8.19 or superior. If you don't have it yet , you can download here <https://www.arduino.cc/en/Main/Software> .
- Press the "Preferences" option to "File" menu and open the preferences window.
- In the text box "Additional boards manager URLs", add the direction: [http://apps.industrialshields.com/main/arduino/boards/package\\_industrialshields\\_index.json](http://apps.industrialshields.com/main/arduino/boards/package_industrialshields_index.json)
- Close the preferences window with the "OK" button.
- Click on "Tools" menu, and open the "Boards" submenu, and click the "Boards Manager" option, to open the Boards Manager window.
- Search "industrialshields" to the search filter and select to the list and click "Install"
- Close the "Boards Manager". Once it is performed that steps, you are available to select each PLC that you wish to work on "Tools" -> "Boards" : M-Duino...

To get more information:

<https://www.industrialshields.com/first-steps-with-the-industrial-arduino-based-plc-s-and-the-panel-pc-s-raspberry-pi-based#boards>

### Warnings



Unused pins should not be connected. Ignoring the directive may damage the controller.

Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.

Industrial Shields PLCs must be powered between 12Vdc and 24Vdc. If a higher voltage is supplied to the equipment can suffer irreversible damage.

Maintenance must be performed by qualified personnel familiarized with the construction, operation, and hazards involved with the control.

Maintenance should be performed with the control out of operation and disconnected from all sources of power.

The Industrial Shields Family PLCs are Open Type Controllers. It is required that you install the M-Duino PLC in a housing, cabinet, or electric control room. Entry to the housing, cabinet, or electric control room should be limited to authorized personnel.









Inside the housing, cabinet or electric control room, the Industrial Shields PLC must be at a minimum distance from the rest of the components of a minimum of 25 cm, it can be severely damaged.

Failure to follow these installation requirements could result in severe personal injury and/or property damage. Always follow these requirements when installing M-Duino family PLCs.

In case of installation or maintenance of the M-Duino please follow the instructions marked in the Installation and Maintenance section on the User Guide.

Do not disconnect equipment when a flammable or combustible atmosphere is present  
Disconnection of equipment when a flammable or combustible atmosphere is present may cause a fire or explosion which could result in death, serious injury and/or property damage.

## Symbology

	Indicates that the equipment is suitable for direct current only; to identify relevant terminals
	Indicates that the equipment is suitable for alternating current only; to identify relevant terminals
	To identify the control by which a pulse is started.
	To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicitly required.
	To identify the switch by means of which the signal lamp(s) is (are) switched on or off.
	CE marking indicates that a product complies with applicable European Union regulations
	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
	To indicate hazards arising from dangerous voltages

## Technical Support

You can contact with us using the best channel for you:



[support@industrialshields.com](mailto:support@industrialshields.com)



[www.industrialshields.com](http://www.industrialshields.com)



Visit our Blog, Forum or Ticketing system



Check the user guides



Visit our Channel

