
🔊 Industrial Shields 🔹 Ardbox HF+ WiFi & BLE Family Datasheet

Technical Features CONECTABLE PLC ARDUINO 24Vcc ARDBOX

MODEL TYPES	Ardbox Analog HF+ WiFi & BLE / Ardbox Relay HF+ WiFi & BLE
Input Voltage	12 to 24Vdc (Fuse protection (2.5A) Polarity protection)
Input rated voltage	24Vdc
Rated Power	30 W
I max.	1.5A
Size	100x45x115
Clock Speed	16MHz
Flash Memory	32KB of which 4KB used by bootloader
SRAM	2.5KB
EEPROM	1KB
Communications	12C, USB, RS485, RS232, SPI (2x) Rx, Tx (Arduino pins), WiFi, BLE Max232-Max485-W5500
USB consideration!	Only for uploading or debugging. NOT connected as a serial Cannot be working in a final application

General Features

DC power supply	12 to 24Vdc
DC power supply	11.4 to 25.4Vdc
DC power supply	30 W MAX.
Power supply voltage	24Vdc
Power supply capacity	700mA
20MΩ min.at 500Vdc bet terminals and the protection	
2.300 VAC at 50/60 Hz for one minute with a leakage current of 10mA max Between all the external AC terminals and the protective ground terminal.	
80m/s2 in the X, Y and Z 2 times each.	direction
0° to 60°C	
10% to 90% (no condensat	tion)
With no corrosive gas	
-20° to 60°C	
2ms min.	
350g max.	
	DC power supply DC power supply DC power supply Power supply voltage Power supply capacity 20MΩ minat 500Vdc bet terminals and the protectiv 2.300 VAC at 50/60 Hc f leakage current of 10m Ar Between all the external A protective ground termina 80m/s2 in the X, Y and Z 0° to 60°C 10% to 90% (no condensat With no corrosive gas -20° to 60°C 2ms min.

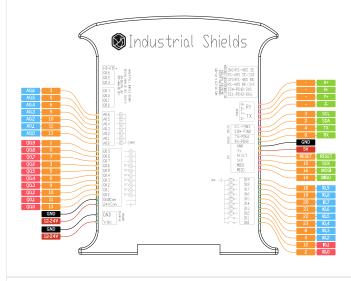

Ardbox Analog WIFI/BLE Communication Zone Pinout


Input
 Output
 Input/Output

ANALOG I/O **RELAY I/O** INPUTS (x10) INPUTS (x10) An/Dig Input 10bit (0-10Vcc) - (x6) 0 to 10Vdc 0 to 10Vdc An/Dig Input 10bit (0-10Vcc) - (x6) 0 to 10Vdc Input Impedance: 39K Separated PCB ground Rated Voltage: 10Vdc 5 to 24Vdc Imin: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc Input Impedance: 39K Separated PCB ground Rated Voltage: 10Vdc 5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc 5 to 24Vdc I min: 2 to 12 mA 5 to 24Vdc I min: 2 to 12 mA **Digital Input** Digital Input (24Vcc) - (x3) (24Vcc) - (x3) Galvanic Isolation Galvanic Isolation Rated Voltage: 24 Vdc Rated Voltage: 24 Vdc 5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc Interrupt Input HS Interrupt Input HS 5 to 24Vdc I min: 2 to 12 mA Galvanic Isolation Rated Voltage: 24 Vdc (24Vcc) * - (x1) (24Vcc) * - (x1) The Interrupt isolated Inputs can also work as Digital isolated Inputs The Interrupt isolated Inputs can also work as Digital isolated Inputs Expandability Expandability I2C - 127 elements - Serial Port RS232/RS485 I2C - 127 elements - Serial Port RS232/RS485 **1** OUTPUTS (x10) OUTPUTS (x10)

Analog Output 8bit (0-10Vcc) - (x7) * The Analog outputs can also work as Digital outputs	0 to 10Vdc I max: 20 mA Separated PCB ground Rated Voltage: 10Vdc	Digital Isolated Output Relay - (x8)	250Vac I max: 5A Galvanic Isolation Diode protected for Relay
Digital Isolated Output	I max: 70 mA Galvanic Isolation Rated Voltage: 24Vdc		Imax 30Vdc: 3A
(24Vcc) - (x3)		Analog Output 8bit (0-10Vcc) - (x2) • The Analog outputs can also work as Digital outputs	0 to 10Vdc I max: 20 mA Separated PCB ground Rated Voltage: 10Vdc
PWM Isolated Output 8bit (24Vcc) - (x7) • The PWM outputs can also work as Digital outputs	5 to 24Vdc I max: 70 mA Galvanic Isolation Rated Voltage: 24Vdc		

References

Model	Reference
Ardbox Analog HF+ WiFi & BLE	007001001200
Ardbox Relay HF+ WiFi & BLE	007001001300

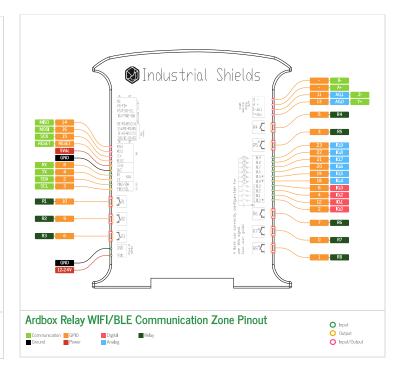

Performance Specifications

Arduino Board	Arduino Leonardo
Control method	Stored program method (http://arduino.cc/en/Tutorial/HomePage)
I/O control method	Combination of the cyclic scan and immediate refresh processing methods.
Programming language	Arduino IDE. Based on wiring (Wiring is an Open Source electronics platform composed of a programming language. "similar to the C")
Microcontroller	ATmega32U4

Industrial Shields



Install Arduino IDE and the Industrial Shields boards

preterenc		construction, c
	xt box "Additional boards manager URLs", add the direction: ps.industrialshields.com/main/arduino/boards/package_ind	Maintenance disconnected
ustrialshi	elds_index.json	The Industrial that you instal
· Close th	Entry to the h authorized per	
• Click on "Tools" menu, and open the "Boards" submenu, and click the "Boards Manager" option, to open the Boards Manager window.		Inside the hou PLC must be minimum of 2
Search ' click "Inst	'industrialshields" to the search filter and select to the list and tall"	Failure to fol personal injury when installing
available	e "Boards Manager". Once it is performed that steps, you are to select each PLC that you wish to work on "Tools" -> : Ardbox	In case of in instructions m Guide.
To get m	ore information:	Do not disconi is present.
nttps://w	/ww.industrialshields.com/first-steps-with-the-industrial- ased-plc-s-and-the-panel-pc-s-raspberry-pi-based#boards	Disconnection is present may injury and/or p
		This equipmer
	ROUINO	 the different s shares the sar potential different s shares the sar potential different s shares the sar potential different s shares the sam of the shares the shares of t
	RDUINO	the different s shares the sar potential diffe components. external equip ground refer recommendat • Connection made and them. • Use of transform
A	RDUINO	the different s shares the sar potential diffe components. external equip ground refer recommendat • Connection made and them. • Use of transform ground refer Technical S
A	RDUINO	the different s shares the sar potential diffe components. external equip ground refer recommendat • Connection made and them. • Use of transform ground ref Technical S
A	RDUINO	the different s shares the sar potential diffe components. external equip ground refer recommendat • Connection made and them. • Use of transform ground ref them. • Use of transform ground ref transform ground ref transform tr
A	Indicates that the equipment is suitable for direct current only; to identify relevant terminals Indicates that the equipment is suitable for alternating current only; to identify relevant terminals	the different s shares the sar potential diffe components. external equip ground refer recommendat • Connection made and them. • Use of transform ground refer Technical S
A	Indicates that the equipment is suitable for direct current only; to identify relevant terminals Indicates that the equipment is suitable for alternating current only; to identify relevant terminals Indicates that the equipment is suitable for alternating current only; to identify relevant terminals Indicates that the equipment is suitable for alternating current only; to identify relevant terminals To identify the control by which a pulse is started. To identify an earth (ground) terminal in cases where neither the	the different s shares the sar potential diffe components. external equip ground refer recommendat • Connection made and them. • Use of transform ground ref them. • Use of transform ground ref transform ground ref transform tr
A	Indicates that the equipment is suitable for direct current only; to identify relevant terminals Indicates that the equipment is suitable for alternating current only; to identify relevant terminals Indicates that the equipment is suitable for alternating current only; to identify relevant terminals Indicates that the equipment is suitable for alternating current only; to identify relevant terminals Indicates that the equipment is suitable for alternating current only; to identify relevant terminals To identify the control by which a pulse is started. To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicily required. To identify the switch by means of which the signal lamp(s) is	the different s shares the sar potential diffe components. external equip ground refer recommendat • Connection made anor them. • Use of transform ground re Technical S You can conta @ supp @ www Visit
Symbo Symbo	Indicates that the equipment is suitable for direct current only, to identify relevant terminals Indicates that the equipment is suitable for alternating current only, to identify relevant terminals Indicates that the equipment is suitable for alternating current only, to identify relevant terminals To identify the control by which a pulse is started. To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicily required. To identify the switch by means of which the signal lamp(s) is (are) switched on or off. CE marking indicates that a product complies with applicable	the different s shares the sar potential diffe components. external equip ground refer recommendat • Connection made and them. • Use of transform ground ref transform ground ref ground ref ground ref ground ref ground ref ground ref ground ref ground ref ground

	-
The steps to follow to install our equipment's to Arduino IDE are:	Unused pins should not be connected. Ignoring the directive may damage the controller.
• Open the Arduino IDE, versión 1.8.0 or superior. If you don't have it yet , you can download here	Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.
https://www.arduino.cc/en/Main/Software .	Industrial Shields PLCs must be powered between 12Vdc and 24Vdc. If a higher voltage is supplied to the equipment can suffer irreversible damage.
Press the "Preferences" option to "File" menu and open the preferences window.	Maintenance must be performed by qualified personnel familiarized with the construction, operation, and hazards involved with the control.
 In the text box "Additional boards manager URLs", add the direction: http://apps.industrialshields.com/main/arduino/boards/package_ind 	Maintenance should be performed with the control out of operation and disconnected from all sources of power.
ustrialshields_index.json	The Industrial Shields Family PLCs are Open Type Controllers. It is required that you install the Ardbox PLC in a housing, cabinet, or electric control room.
Close the preferences window with the "OK" button.	Entry to the housing, cabinet, or electric control room should be limited to authorized personnel.
• Click on "Tools" menu, and open the "Boards" submenu, and click the "Boards Manager" option, to open the Boards Manager window.	Inside the housting, cabinet or electric control room, the Industrial Shields PLC must be at a minimum distance from the rest of the components of a minimum of 25 cm, it can be severely damaged.
Search "industrialshields" to the search filter and select to the list and click "Install"	Failure to follow these installation requirements could result in severe personal injury and/or property damage. Always follow these requirements when installing Ardbox family PLCs.
• Close the "Boards Manager". Once it is performed that steps, you are available to select each PLC that you wish to work on "Tools" -> "Boards" : Ardbox	In case of installation or maintenance of the Ardbox please follow the instructions marked in the Installation and Maintenance section on the User Guide.
To get more information: https://www.industrialshields.com/first-steps-with-the-industrial- arduino-based-plc-s-and-the-panel-pc-s-raspberry-pi-based#boards	Do not disconnect equipment when a flammable or combustible atmosphere is present. Disconnection of equipment when a flammable or combustible atmosphere is present may cause a fire or explosion which could result in death, serious injury and/or property damage.
	 This equipment does not include galvanic isolation between the grounds of the different systems. This means that if an external device or sensor that shares the same ground reference (GND) with the system is connected, any potential difference between these grounds could damage the connected components. To avoid issues with interference, ground loops, or damage to external equipment, ensure that all connected devices share the same ground reference or use systems with appropriate isolation. The recommendations in this case are: Connection Review: Verify that all ground connections are properly made and that there are no significant potential differences between them. Use of Isolation: Consider using galvanic isolators or isolation transformers if it is necessary to connect equipment with different ground references.
Symbology	Technical Support
Indicates that the equipment is suitable for direct current only; to identify relevant terminals	You can contact with us using the best channel for you:
∼ Indicates that the equipment is suitable for alternating current only; to identify relevant terminals	support@industrialshields.com
To identify the control by which a pulse is started.	www.industrialshields.com

t our Blog, Forum or Ticketing system

- our chat service
- ck the user guides
 - t our Channel

