

Technical Features

MODEL TYPE	ESP32 PLC 14
Input Voltage	12 to 24Vdc (Fuse protection (2.5A) Polarity protection)
Input rated voltage	24Vdc
Rated Power	8 W
I max.	1.5A
Size	100x45x115
Clock Speed	External: 240 MHz Internal: 8 MHz
Flash Memory	4 MB
SRAM	4 MB
PSRAM	2 MB
Communications	USB - RS485 - ETHERNET - WiFi 2.5GHz - BLE 2480 MHz

General Features

Power supply voltage	DC power supply	12 to 24 Vdc
Operating voltage range	DC power supply	11.4 to 25.4 Vdc
Power consumption	DC power supply	30 W MAX
External power supply	Power supply voltage	24 Vdc
	Power supply current	300 mA
Dielectric strength	1500 Vac at 50/60 Hz for one minute with a leakage current of 10 mA max.	
Shock resistance	50 m/s ² in the X, Y and Z direction 3 times each, complying with the IEC-60068-2-27:2008 standard.	
Ambient temperature (operating)	-20 ° to 70 °C	
Ambient humidity (operating)	10 % to 90 % (no condensation)	
Ambient environment (operating)	With no corrosive gas	
Ambient temperature (storage)	-20 ° to 70 °C	
Power supply holding time	2 ms min.	
Weight	350 g max	

I/Os

IO - 0 Digital	Input: GPB 3 - MCP23017SS Output: GPIO 12 - ESP32
IO - 1 Digital	Input: GPB 2 - MCP23017SS Output: GPIO 25 - ESP32
IO - 2 Digital	Input: GPB 4 - MCP23017SS Output: GPIO 26 - ESP32
IO - 3 Digital	Input: GPB 5 - MCP23017SS Output: GPIO 27 - ESP32
IO - 4 Digital	Input: GPA 4 - MCP23017SS
IO - 5 Digital	Input: GPA 6 - MCP23017SS
IO - 6 Digital	Input: GPA 5 - MCP23017SS
IO - 7 Analog 4-20 mA Analog 0-10 V / Digital 3.3-24V	Input: GPIO 32 - ESP32 Input: GPIO 34 - ESP32 Factory Default Configuration
IO - 8 Analog 4-20 mA Analog 0-10 V / Digital 3.3-24V Analog 0-10 V / Digital 3.3-24V	Input: GPIO 33 - ESP32 Input: GPIO 35 - ESP32 Factory Default Configuration
IO - 9 Relay	Output: GPA 7 - MCP23017SS



Outputs Q0.0 - Q0.1 - Q0.2 - Q0.3

By default, Outputs 0 to 3 give 5V at HIGH level, but they can be changed to provide Vdc by software.

- Q0 - 0: GPB 7 - MCP23017SS
- Q0 - 1: GPB 6 - MCP23017SS
- Q0 - 2: GPA 1 - MCP23017SS
- Q0 - 3: GPA 0 - MCP23017SS

Vdc is Power Supply Voltage and it can be from 12 to 24Vdc

Pitch for FK-MC 0,5/10-ST-2,5 conector: 2.50 mm
Pitch for MC 1,5/ 2-ST-3,81 conector: 3.81 mm

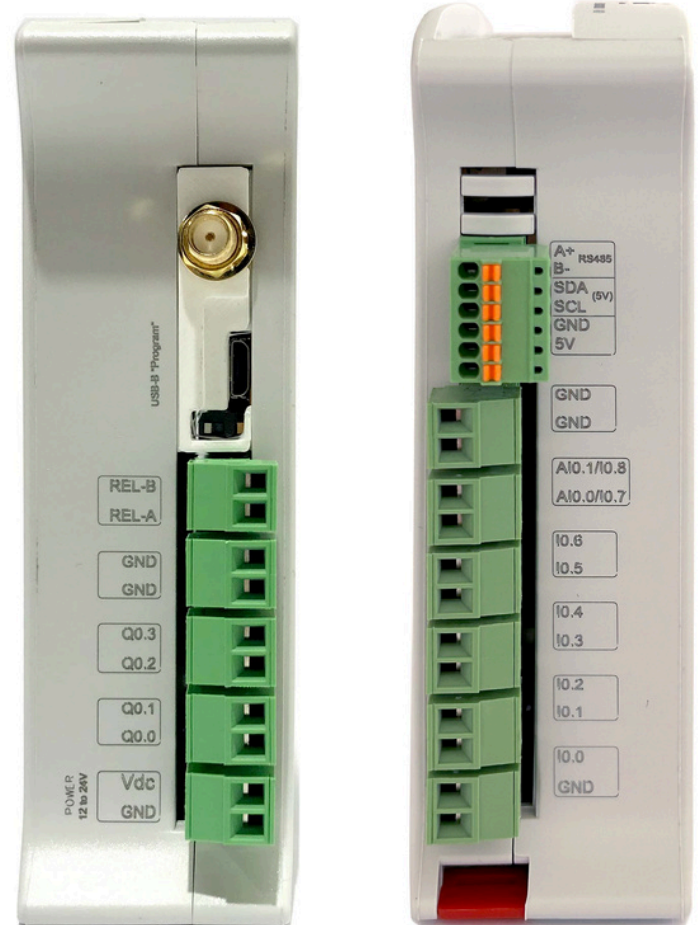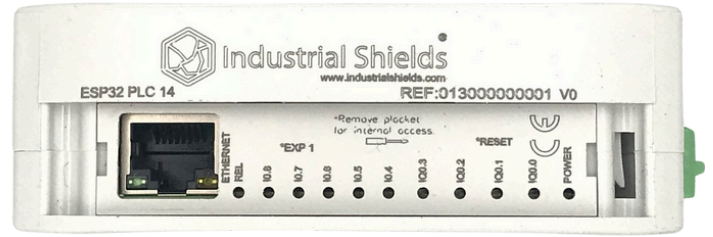

Wireless Operation details

Operating Frequency	WiFi	2.4 GHz to 2.5 GHz
	BLE	2402-2480 MHz (40 Channels)
Transmission Power (EIRP)	WiFi	at 2.5 GHz, Power : 9dBm
	BLE	at 2480 MHz, Power: 2.7dBm


Expandability

ModbusRTU with RS485: 32 elements

Warning

Consider that depending on your selection when acquiring the PLC, the model you use will have either two analog inputs of 0-10Vdc or 4-20mA, but both cannot coexist in the same PLC, nor be modified by software.



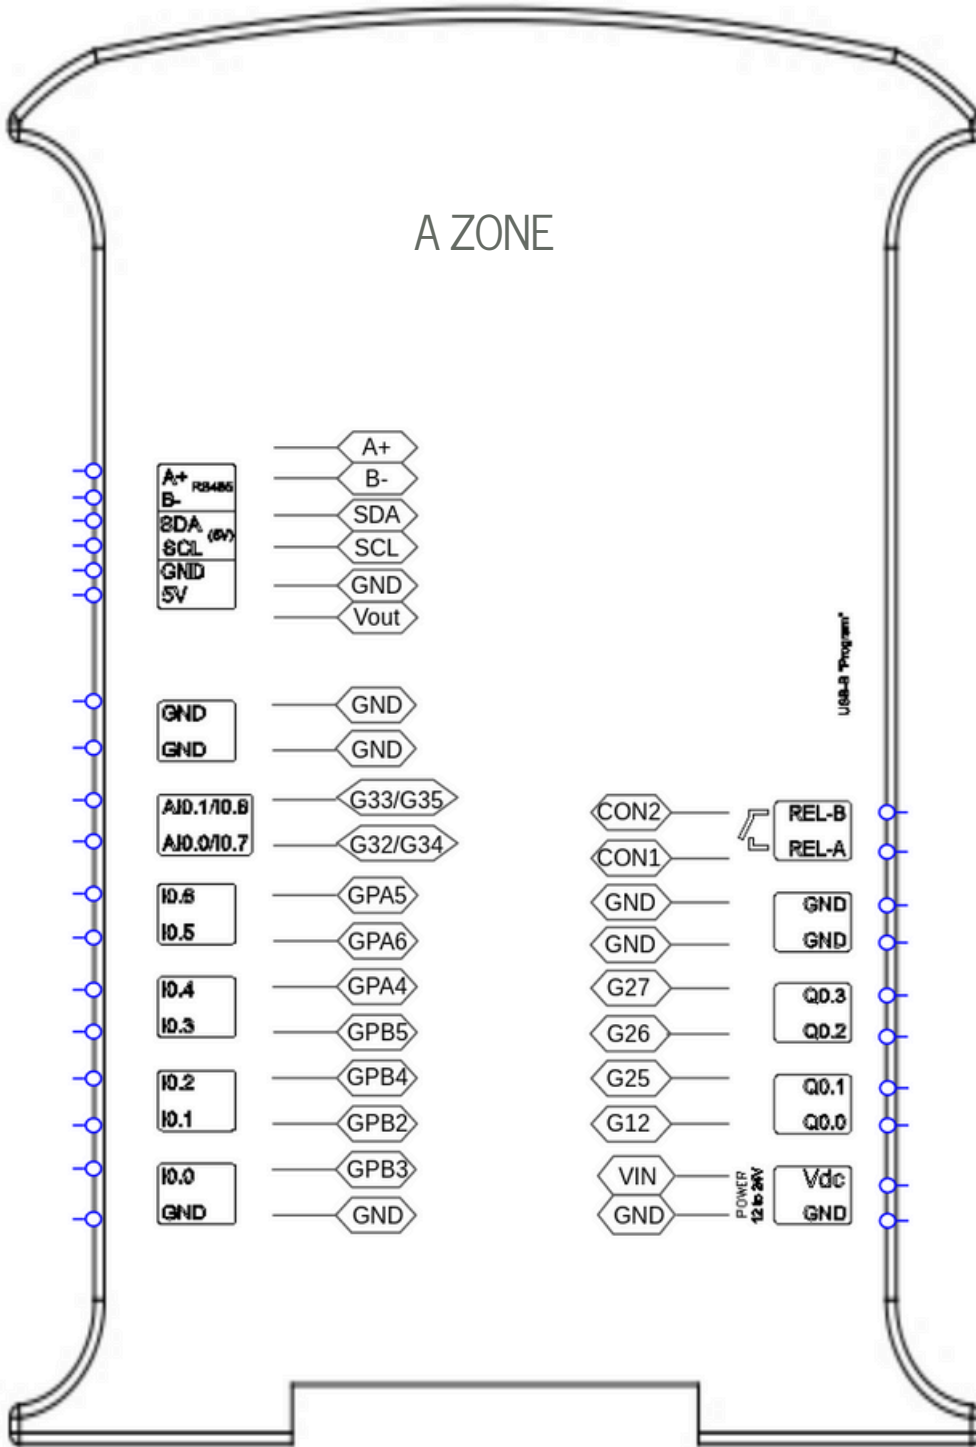

RS-485

- RxD: GPIO 16
- TxD: GPIO 17
- RE, DE: GPIO 5

Relay Output:

- Pin GPA7 from MCP23017



Performance Specifications

CPU	ESPRESSIF ESP-WROOM-32U
Control method	Stored program method
I/O control method	Combination of the cyclic scan and immediate refresh processing methods.
Programming language	Arduino IDE. Based on wiring (Wiring is an Open Source electronics platform composed of a programming language. "similar to the C")
Microcontroller	ESP32

Warnings

It must be used a long micro USB-B type cable with the thin plastic part (contour of 2mm).



Unused pins should not be connected. Ignoring the directive may damage the controller.

Before using this product, it is the responsibility of the user to read the product's User Guide and all accompanying documentation.

Industrial Shields PLCs must be powered between 12Vdc and 24Vdc. If a higher voltage is supplied to the equipment can suffer irreversible damage.

Maintenance must be performed by qualified personnel familiarized with the construction, operation, and hazards involved with the control.

Maintenance should be performed with the control out of operation and disconnected from all sources of power.

The Industrial Shields Family PLCs are Open Type Controllers. It is required that you install the ESP32 PLC 14 in a housing, cabinet, or electric control room. Entry to the housing, cabinet, or electric control room should be limited to authorized personnel.

Inside the housing, cabinet or electric control room, the Industrial Shields PLC must be at a minimum distance from the rest of the components of a minimum of 25 cm, it can be severely damaged.

Failure to follow these installation requirements could result in severe personal injury and/or property damage. Always follow these requirements when installing ESP32 PLC 14.

In case of installation or maintenance of the ESP32 PLC 14 please follow the instructions marked in the Installation and Maintenance section on the User Guide.

Do not disconnect equipment when a flammable or combustible atmosphere is present.

Disconnection of equipment when a flammable or combustible atmosphere is present may cause a fire or explosion which could result in death, serious injury and/or property damage.

Warnings

This equipment does **not include galvanic isolation between the grounds** of the different systems. This means that if an external device or sensor that shares the same ground reference (GND) with the system is connected, any potential difference between these grounds could damage the connected components. To avoid issues with interference, ground loops, or damage to external equipment, ensure that all connected devices share the same ground reference or use systems with appropriate isolation. The recommendations in this case are:

- **Connection Review:** Verify that all ground connections are properly made and that there are no significant potential differences between them.
- **Use of Isolation:** Consider using **galvanic isolators** or **isolation transformers** if it is necessary to connect equipment with different ground references.

Install Arduino IDE and the Industrial Shields boards

The steps to follow to install our equipment's to Arduino IDE are:

- Open the Arduino IDE, versión 1.8.0 or superior. If you don't have it yet , you can download here <https://www.arduino.cc/en/Main/Software> .
- Press the "Preferences" option to "File" menu and open the preferences window.
- In the text box "Additional boards manager URLs", add the direction: http://apps.industrialshields.com/main/arduino/boards/package_industrialshields_index.json
- Close the preferences window with the "OK" button.
- Click on "Tools" menu, and open the "Boards" submenu, and click the "Boards Manager" option, to open the Boards Manager window.
- Search "industrialshields-esp32" to the search filter and select to the list and click "Install"
- Close the "Boards Manager". Once ait is performed that steps, you are available to select each PLC that you wish to work on "Tools" -> "Boards" : Industrial Shields ESP32...

Symbology

	Indicates that the equipment is suitable for direct current only, to identify relevant terminals
	Indicates that the equipment is suitable for alternating current only, to identify relevant terminals
	To identify the control by which a pulse is started.
	To identify an earth (ground) terminal in cases where neither the symbol 5018 nor 5019 is explicitly required.
	To identify the switch by means of which the signal lamp(s) is (are) switched on or off.
	CE marking indicates that a product complies with applicable European Union regulations
	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
	To indicate hazards arising from dangerous voltages

Technical Support

You can contact with us using the best channel for you:

support@industrialshields.com

www.industrialshields.com

Visit our Blog, Forum or Ticketing system

Check the user guides

Visit our Channel

